

**PW6001 Firmware Update Procedures**

HIOKI E.E. CORPORATION

1. Copy the firmware update file (6001Vxxx.VER) to PW6001 directory of a USB memory stick on a PC.
2. Insert the USB memory stick with copied firmware update file to the PW6001, and turn on the power.  
The settings will be initialized after the firmware update.
3. Press “FILE” key, so that the file list is displayed.

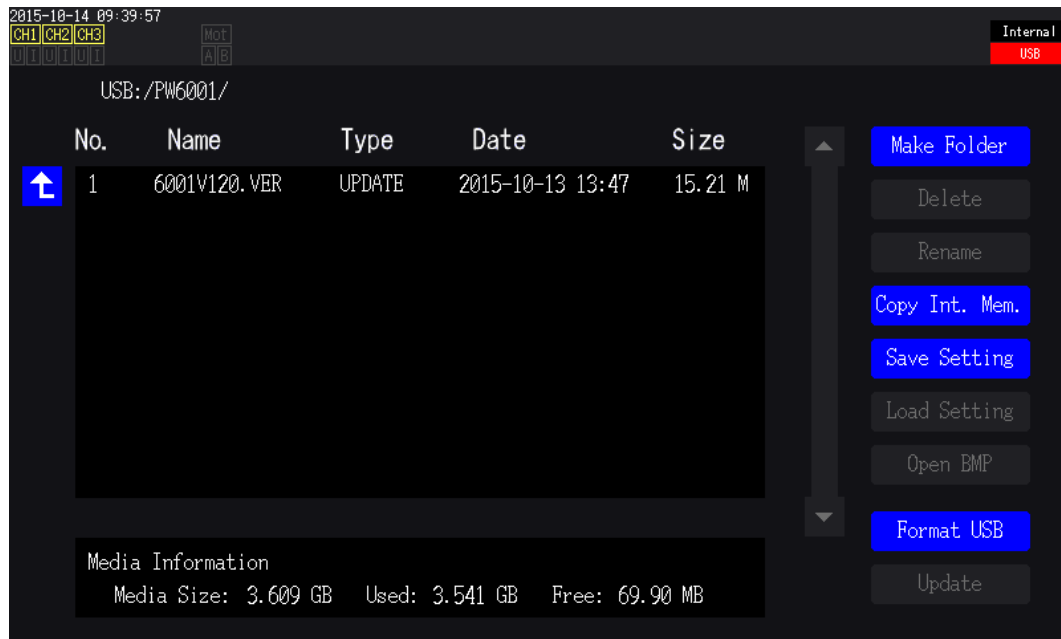


Figure 1: File list screen (1)

4. Touch file name(6001Vxxx.VER), so that the file list screen will be changed as in below.

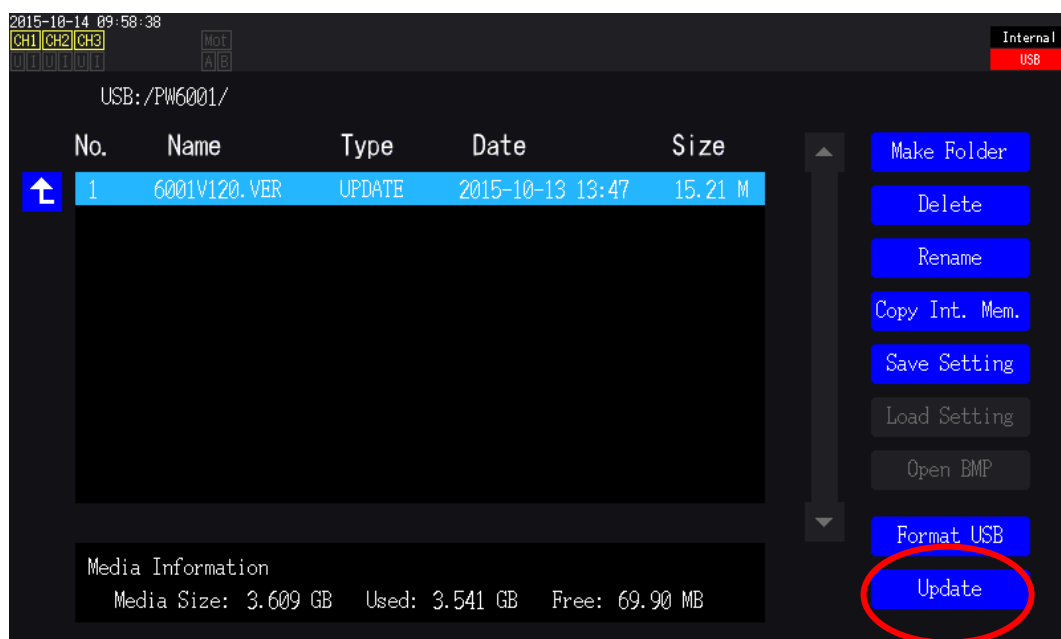


Figure 2: File list screen (2)

5. Touch “Update” button, so that the following screen with a confirmation message appears.

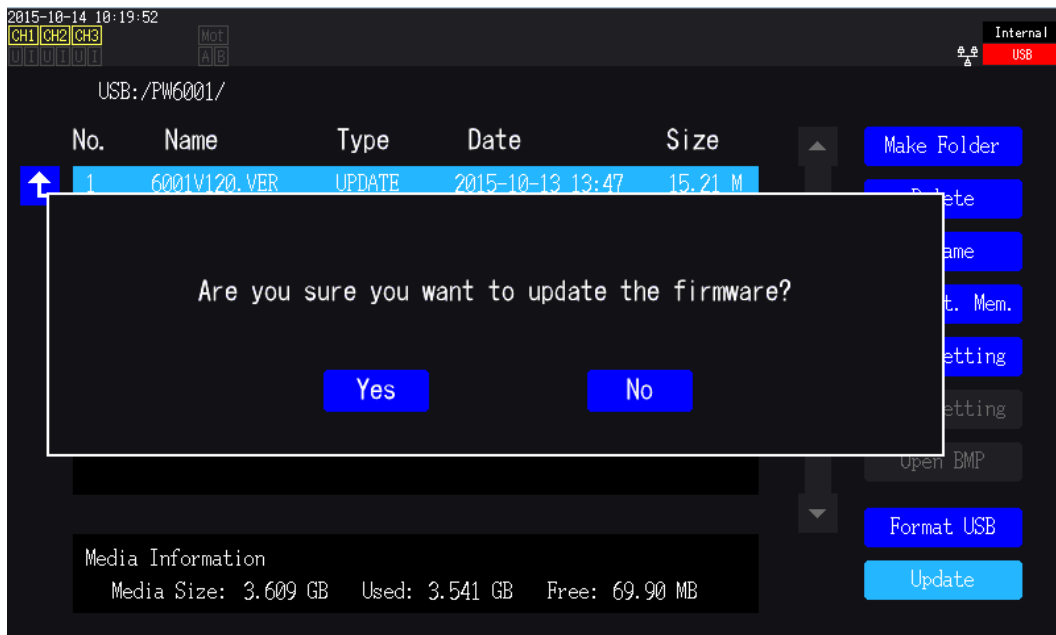


Figure 3: Update confirmation screen

6. Touch “Yes” button, so that the update is started, and the following screen with a warning message appears.

Do not turn off the power until the PW6001 is restarted.

If the update is failed, the unit shall be sent to HIOKI to repair and adjust.

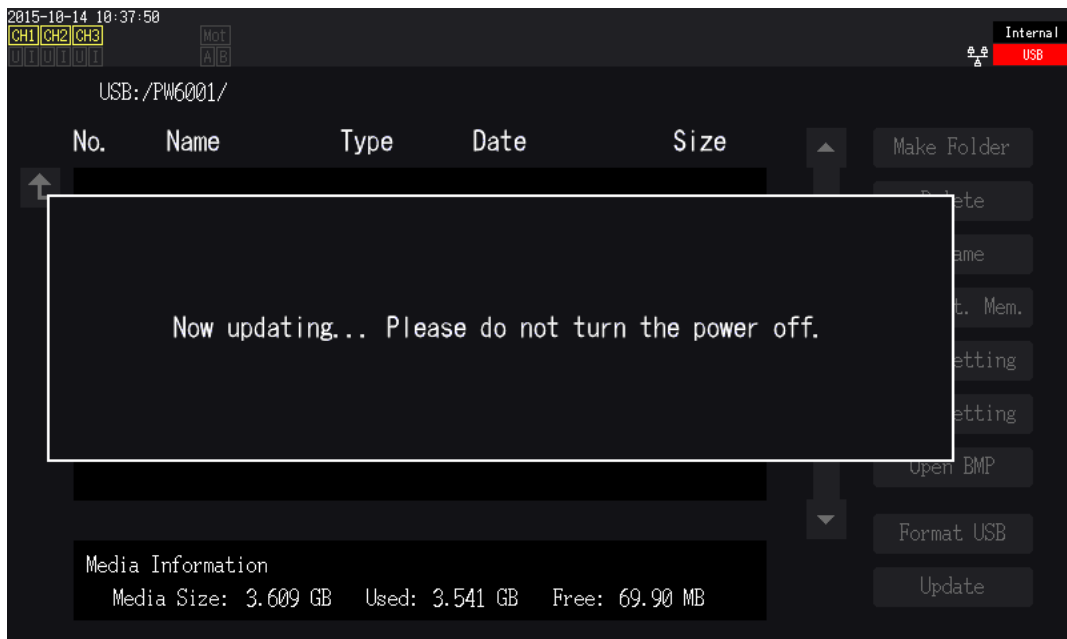


Figure 4: Update message screen

- Update is completed in about 2 minutes. It will restart automatically when the update is complete. Confirm the version number in the 'CONFIG' screen by pressing "SYSTEM" key.

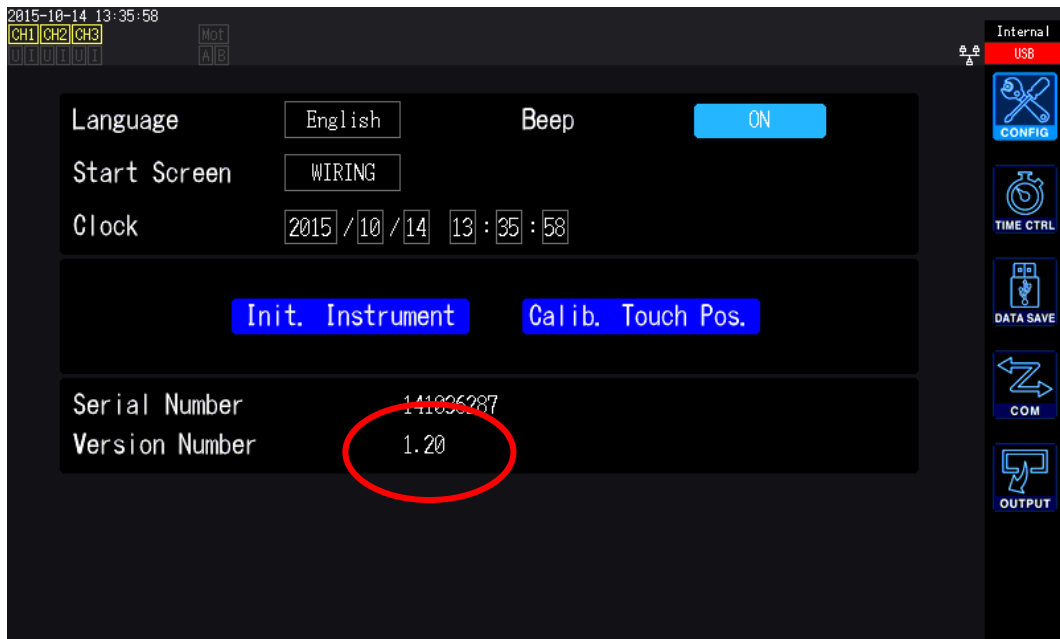


Figure 5: CONFIG screen